

## 庭照明設定と動作について

1. 夕方暗くなると庭通路の照明が自動点灯し、夜間定時（目安 21～23 時頃）に自動消灯します。

※最初の晩のみ内部機器調整のため、朝まで点灯し続けることがあります、翌日より夜間定時に自動消灯します。

2. 夜間点灯中は電源ボックス前面の蓋を開けて押しボタン（下記写真内の赤丸）を押すことで「点灯↔消灯」を繰り返すことができます。
3. 手動点灯させた後も設定時間になれば自動消灯します。
4. **設定時間に消灯後も周囲が暗いときは、必要があれば押しボタンを押すことで手動で「消灯↔点灯」を繰り返し行えます。**
5. 周囲が明るいときは手動ボタンを押しても点灯できません。
6. 手動押釦による「点灯↔消灯」に関係なく翌日暗くなれば自動的に点灯します。

【電源ボックス】



【ボックス内押しボタン】



## Garden Lighting Settings and Operation

1. When it becomes dark in the evening, the garden pathway lights will automatically turn on and will automatically turn off at a scheduled nighttime hour (approximately between 9:00 PM and 11:00 PM).
2. Note: On the first night only, the lights may remain on until morning due to internal equipment adjustments. From the following day onward, they will automatically turn off at the scheduled nighttime hour.
3. While the lights are on at night, you can open the front cover of the power box and press the push button (circled in red in the photo below) to toggle the lights on ↔ off.
4. Even if the lights are turned on manually, they will automatically turn off at the scheduled time.
5. After the lights turn off at the scheduled time, if the surroundings are still dark, you can press the push button to manually toggle off ↔ on as needed.
6. When the surroundings are bright, the lights cannot be turned on even if the manual button is pressed.
7. Regardless of manual on ↔ off operation, the lights will automatically turn on again when it becomes dark the next day.

【Power Box】



【Push Button Inside the Box】

